vtech

Innovation Beyond Technology℠

User's manual

VTECH TELECOMMUNICATIONS LTD.

www.vtech.com

Model: VT1050/
VT1050T

DECT

Table of contents

Important Safety Instructions 1

Setting up the telephone 2

Package Contents 2
Location 2
Connecting the telephone 3
Connecting the base station 3
Installing and charging the batteries 4

Getting to know your phone 5

Overview of the handset 5
Overview of the base station 6
Displays, keys , icons 7

Using your phone 9

Make a call 9
Preparatory Dialing 9
Direct Dialing 9
Call from the phonebook 9
Call from the calls log 9
Call from the redial list 9
Call timer 9
Answer a call 10
End a call 10
Adjust Earpiece and Handsfree Volume 10
Mute a call 10
Set the Silent Mode 10
Turn on the Keypad Lock 10
Make an Internal Call (For VT1050T only) 11
Intercom Another Handset (For VT1050T only) 11
Transfer an External Call to another handset (For VT1050T only) 11
Make a 3-way Conference Call (For VT1050T only) 11

Redial 13

Redial the last number 13
Redial a number from the Redial list 13
Store a Redial Number into the Phonebook 13
Delete a Redial Number 13
Delete the Entire Redial List 13

Call List 14

Caller display (Network Dependent) 14
View the Call List 14
Store a Call List Number into the Phonebook 14
Delete an entry in the Call List 15
Delete the entire list of the Call List 15
View the Details OF THE Call List Entry 15

Phonebook 16

Private Phonebook 16
Add a New Phonebook Entry 16
View a Phonebook Entry 16
Edit a Phonebook Entry 16
Delete A phonebook Entry 17
Delete the Entire Private Phonebook 17
Check the Phonebook Usage 17
Text and Digit Entry Table 18

Table of contents

Base Settings 19
- Dial Type 19
- Change the system PIN Code 19
- Paging (Find the handset) 19
- Delete HS 20
- Change flash time 20

Handset Settings 21
- Alarm Settings 21
- Turn on/off the Alarm 21
- Set the Alarm Time 21
- Ringer Setup 22
- Set the Ringer Melody for Internal Calls 22
- Set the Ringer Melody for External Calls 22
- Set the Ringer Volume 22
- Tone Setup 23
- Set Key Tone 23
- Set Battery Tone 23
- Set Out Of Range Tone 23
- Set the Handset Language 24
- Rename the Handset 24
- Set Handset Display 24
- Set the Auto Answer 24

Date and Time Settings 25
- Change the Date Format 25
- Change the Time Format 25
- Set the Time 25
- Set the Date 26
- Reset your Phone 26

Registration 26

Default Settings 27

Troubleshooting 28

Technical Specification 29
- Power Adaptor Information 30
- Battery Information 30

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1) Read and understand all the instructions.
2) Follow all warnings and instructions marked on the product.
3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4) Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6) Unplug this product form the wall outlet and refer servicing to VTech under the following conditions
   - When the power supply cord or plug is damaged or frayed.
   - If the product does not operate normally by following the operating instructions.
   - If the product has been dropped and the cabinet has been damaged.
   - If the product exhibits a distinct change in performance.
7) Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
8) Do not use the telephone to report a gas leak in the vicinity of the leak.
9) Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities
10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
11) Do not use third party charging bays. The batteries may be damaged.
12) Please note the correct polarity while inserting the batteries.
13) Do not immerse batteries in water, do not place in fire.

If you have questions about this product, or having difficulty with setup or operation, call our VTech Electronics (HK) Ltd.
Customer Service Centre Tel: 852-2776 3223
Technical Inquiry Hotline Tel: 852-2667 7433

Setting up the telephone

Package contents

The package for the VT1050/VT1050T contains the following items:

VT1050

- 1 Handset
- 1 Base station
- 1 AC power adapter
- 1 Telephone line cord
- 2 rechargeable batteries
- 1 user manual

VT1050T

- 2 Handsets
- 1 Base station
- 2 AC power adapters
- 1 Telephone line cord
- 1 Charger
- 4 rechargeable batteries
- 1 user manual

Location

The maximum range between the base station and the handset is approximately 300 meters. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

note

- Your telephone will not function if the mains plug or adapter is not plugged in. Thus, first charge the battery before you connect the unit with the telephone network.
  The unit will function only if it is charged completely.

Connecting the telephone

Before you can start using your telephone you must plug in the telephone connection cords and the mains cable.

Connecting the base station

1) Plug the power supply & line cord into the base station.
2) Plug the power supply & line cord into the wall socket.
3) Always use the cables provided in the box.

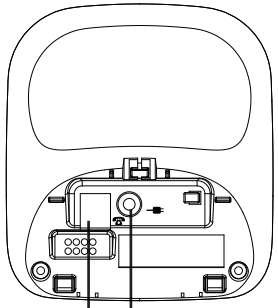

Socket for telephone connection cord

Socket for mains cable

Installing and charging the batteries

1) Slide open the battery compartment cover.
2) Place the 2 batteries as indicated. Respect polarity.
3) Slide the battery compartment cover back.
4) Put the handset on the base and charge for 16 hours first time. A beep indicates that the handset is properly placed on the base .

Use only the power pack provided for the base station.
Use only NiMH rechargeable batteries.

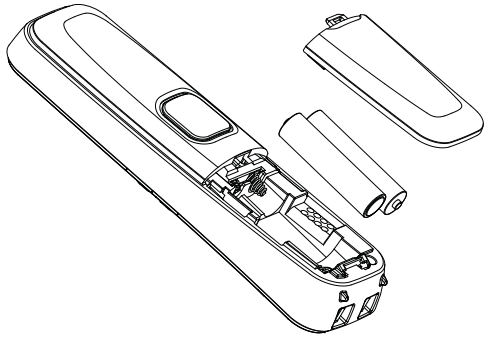

Getting to know your phone

Overview of the handset

1. LEFT SOFT KEY (MENU/OK)
   In idle mode: Press to access the main menu
   In sub-menu mode: Press to confirm the selection
   During a call: Press to access Phonebook/ Redial List/ Call List
2. RIGHT SOFT KEY (CLEAR/BACK/MUTE/ INTERCOM)
   In main menu mode: Press to go back to idle screen
   In sub-menu mode: Press to go back to previous level
   In sub-menu mode: Press and hold to go back to idle screen
   In editing / predialing mode: Press to clear a character / digit
   In editing / predialing mode: Press and hold to delete all the characters / digits
   During a call: Press to mute / unmute the microphone
   In idle mode: Press to intercom another handset
3. UP
   In idle mode: Press to access the call list
   In menu mode: Press to scroll up the menu items
   In menu mode: Press and hold continuously to perform a continuous up-scrolling of the menu.
   In Phonebook list / Redial list / Calls log: Press to scroll up the list
   During a call: Press to increase the volume
   In ringing: Press to increase the ringer volume
4. DOWN
   In idle mode: Press to access the redial list
   In menu mode: Press to scroll down the menu items
   In menu mode: Press and hold continuously to perform a continuous down-scrolling of the menu.
   In Phonebook list / Redial list / Calls log: Press to scroll down the list
   During a call: Press to decrease the volume
   In ringing: Press to decrease the ringer volume

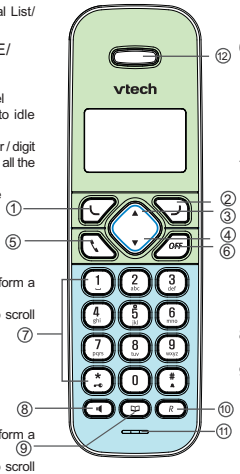

5. TALK ON
   In idle / predialing mode : Press to make a call
   In Redial list / Calls Log / Phonebook entry: Press to make a call to the selected entry in the list During ringing: Press to answer a call
6. TALK OFF
   During a call: Press to end a call and go back to idle screen
   In menu / editing mode: Press to go back to idle screen
   In idle mode: Press and hold to power off the handset
   In idle mode (when the handset is powered off): Press to power on the handset
7. ALPHANUMERIC KEYPAD, * (STAR), # (HASH)
   Press to insert a digit / character / * / #
   #key in idle mode: Press and hold to turn off the ringer
   * key during a call (in Pulse mode): Press to switch to tone mode
   * key in Idle mode: Press and hold to turn on / off the keypad lock
   * key in predialing / number editing mode: Press and hold to insert a pause
8. Speakerphone Button
   Switch on / off handset speaker during conversation
9. PHONEBOOK
   In idle mode: Press to access the phonebook list
10. FLASH
    In idle / predialing mode: Press to insert a flash
    During a call: Press to dial a flash
11. MICROPHONE
12. EARPIECE

Getting to know your phone

Overview of the base station

1. PAGE

Press the Page on the base station to page your handset. It will ring for approximately 60 seconds.
Press on the handset or on the base to stop the paging.

2. Charging cradle for the handset.

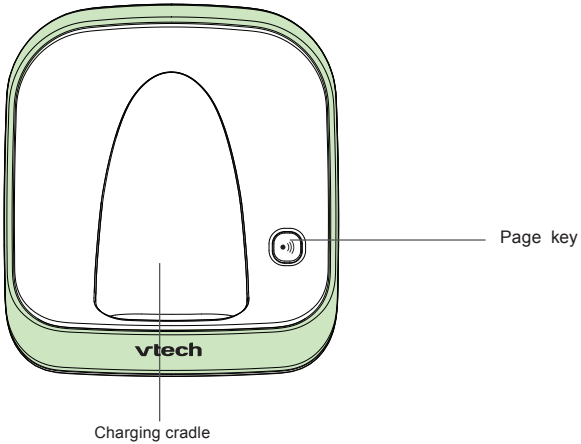

Getting to know your phone Displays, keys, icons

The LCD display gives you information on the current status of the telephone.

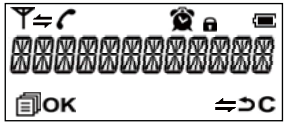

Icon Description:

Scroll up / down the menu items / Phonebook list / Redial list / Call List

Steady when the handset is in range of the base. Flash when out of range of the base or not registered to the base.

Steady when an intercom is in progress.
Flash when there is an incoming internal call.

Indicate a call is in progress.

Indicate that the ringer is switched off.

Steady when an alarm is set. Flash when the alarm time set before reaches.

Indicate that the keypad is locked.

Indicate when the battery is fully charged.
Flash when the unit performs initial charging.

Indicate when the battery needs charging.
Flash when low battery power level is detected.

◄ Indicate when more characters are existed before the text currently displayed.

► Indicate when more characters are existed after the text currently displayed.

(MENU) Press to select more menu options if applicable

OK Press to confirm the current selection if applicable.

(INT) Press to conduct Intercom call when idle (only for twin/trio version)

(BACK) Press to go back to previous menu level or cancel the current action if applicable

C Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.

Using your phone

Make a Call

Preparatory Dialing

Enter the phone number and press "TALK on" key to dial the number. Press "TALK off " key OFF to clear the entry.

Direct Dialing

Press to take the line and enter the phone number.

Call from the phonebook

Press to access the phonebook and press ▲/▼ to select the desired phonebook entry. Press to dial out to the selected phonebook entry. Alternatively, press to access the phonebook to get the desired phonebook entry.

Call from the calls log

Press ▲ to access the call log and press ▲/▼ to select the desired calls log entry. Press to dial out to the selected calls log entry.

Call from the redial list

Press ▼ to access the redial list and press ▲/▼ to select the desired redial number. Press to dial out to the selected redial number.

Call timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has made. It is shown in hours, minutes and seconds format (HH:MM:SS).

Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press to answer a call.

If the handset is on the charging cradle or the base station and if AUTO ANSWER is set to ON:

When the phone rings, pick up the handset to answer a call.

End a Call

During a call connection, press OFF to end the call.

OR

Put the handset on the base station to end the call.

Adjust Earpiece and Handsfree Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of earpiece and handsfree volume.

During a call:

Press ▲/▼ to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.

During a call:

Press to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you. Press again to unmute the microphone.

Set the Silent Mode

In idle, press and hold # to turn off the handset ringer. The icon is displayed on the LCD.

Turn on the Keypad Lock

In idle, press and hold * to turn on the keypad lock. The icon is displayed on the LCD

Make an Internal Call (For VT1050T only)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls.If the called handset is not answered within 20 seconds, the called handset will stop ringing and the calling handset will return standby mode.

Intercom Another Handset (For VT1050T only)

1. In idle mode, press and the registered handsets will display except the calling handset.
2. Enter the desired handset number to intercom with.
3. The called handset rings and press on the called handset to establish the internal call.

Transfer an External Call to another handset (For VT1050T only)

During an external call:

1. Press and ▲/▼ to select INTERCOM.
2. Press <OK> to select the desired handset to intercom with
3. The external call is put on hold automatically and the called handset rings.
4. Press on the called handset to establish an internal call.
5. Press OFF on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred to the called handset.

Make a 3-way Conference Call (For VT1050T only)

The conference call feature allows one external call to be shared with two handsets (in intercom).
The three parties can share the conversation and no network subscription is required.

During an external call:

1. Press and ▲/▼ to select INTERCOM.
2. Press <OK> to select the desired handset to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press on the called handset to establish an internal call.
5. Press and hold ✱ on the calling handset to establish the conference call.
   Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

note

• If there are no numbers in the redial list, the display shows “EMPTY”.

Redial

Redial the last number

You can redial up to 5 of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

Redial a Number from the Redial List

1. In idle mode, press ▼ to access the redial list.
2. Press ▲/▼ to browse the redial list.
3. Press to dial to the selected redial number.

Store a Redial Number into the Phonebook

1. In idle mode, press ▼ to access the redial list ,
2. Press ▲/▼ to select the desire number
3. Press and ▲/▼ to select ADD TO PB.
4. Press to enter the name.
5. Press to edit the redial number to store into the phonebook.
6. Press to select phonebook melody.
7. Press and ▲/▼ to browse the melody list. The respective melody will be played when browsing the melody list.
8. Press to confirm.

Delete a Redial Number

1. In idle mode, press ▼ to access the redial list
2. Press ▲/▼ to select the desire number
3. Press and ▲/▼ to select DELETE.
4. Press to confirm.

Delete the Entire Redial List

1. In idle mode, press ▼ to access the redial list
2. Press ▲/▼ to select the desire number
3. Press and ▲/▼ to select DELETE ALL.
4. Press to confirm.
5. Press to re-confirm.

Call List

Caller display (Network Dependent)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 10 unanswered calls with date/time information in the calls log. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will display.

If the caller number is not provided, "UNAVAILABLE" will display.

If the caller is from network public phone, "PUBLIC" will display.

In standby, if three unanswered calls are received, "03 NEW CALLS" will be displayed.

View the Call List

All unanswered calls are saved in calls log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a <* icon> at the centre of the bottom line of the display.

1. Press ▲ to access the call list.OR Press ✆ and ▲/▼ to select CALL LIST. Press ✆ to confirm
2. Press ▲/▼ to select the desired entry.

Store a Call List Number into the Phonebook

1. Press ▲ to access the call list.OR Press ✆ and ▲/▼ to select CALL LIST.). Press ✆ to confirm
2 Press ▲/▼ to select the desired entry.
3. Press ✆ and ▲/▼ to select ADD TO PB.
4. Press ✆ to enter the name.
5. Press ✆ and the selected call list number is displayed.
6. Edit the number if necessary.
7. Press ✆ and▲/▼ to select the melody.
8. Press ✆ to confirm.

Delete an entry in the Call List

1. Press ▲ to access the call list.OR Press ✆ and ▲/▼ to select CALL LIST.). Press ✆ to confirm
2. Press ▲/▼ to select the desired entry.
3. Press ✆ and ▲/▼ to select DELETE.
4. Press ✆ to confirm.

Delete the entire list of the Call List

1. Press ▲ to access the call list.OR Press ✆ and ▲/▼ to select CALL LIST . Press ✆ to confirm
2. Press ▲/▼ to select the desired entry.
3. Press ✆ and ▲/▼ to select DELETE ALL.
4. Press ✆ to confirm.
5. Press ✆ to re-confirm.

View the Details of the Call List Entry

1. Press ▲ to access the call list.OR Press ✆ and ▲/▼ to select CALL LIST Press ✆ to confirm
2. Press ▲/▼ to select the desired entry.
3. Press ✆ and ▲/▼ to select DETAILS.
4. Press ✆ the date and time of the selected call list entry display.

Phonebook

Private Phonebook

Your phone can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ring tones for your phonebook entries. Phonebook entries are stored alphabetically by name.

Add a New Phonebook Entry

In idle:

1. Press 📖 to access the phonebook,
   or
   Press ↳ and ▲/▼ to select PHONEBOOKmain menu item and then press ↳ to access the phonebook.
2. Press ↳ to select ADD.
3. Press ↳ to enter the name.
4. Press ↳ to enter the number.
5. Press ↳ and▲/▼ to select the desired ringtone for your phonebook entry.
6. Press ↳ to store the phonebook entry.

View a Phonebook Entry

In idle:

1. Press 📖 to access the phonebook.
2. Press ▲/▼ to select the desired phonebook entry.
3. Press ↳ and ▲/▼ to select VIEW.
4. Press ↳ to review the name, number and melody of the selected phonebook entry.

Edit a Phonebook Entry

In idle:

1. Press 📖 to access the phonebook.
2. Press ▲/▼ to select the desired phonebook entry.
3. Press ↳ and ▲/▼ to select EDIT.
4. Press ↳ the current contents of the selected phonebook entry displays.
5. Edit the name and press ↳ .
6. Edit the number and press ↳

note

- Press ▲ /▼ to move through other phonebook entries.

7. Select the ringtone and press <OK> to confirm.

Delete a Phonebook Entry

In idle:

1. Press 📖 to access the phonebook.
2. Press ▲/▼ to select the desired phonebook entry.
3. Press ✆ and ▲/▼ to select DELETE.
4. Press ✆ to confirm.

Delete the Entire Private Phonebook

1. Press 📖 to access the phonebook.
2. Press ✆ and ▲/▼ to select DELETE ALL.
3. Press ✆ to confirm.
4. Press ✆ to re-confirm.

Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

1. Press 📖 to access the phonebook.
2. Press ✆ and ▲/▼ to select PB STATUS.
3. Press ✆ to confirm.

Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. Respective character table will be used when corresponding menu language is selected. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by ▲/▼ to amend the text entry.
3. Press ↩ to delete the last character.
4. Press and hold ↩ to delete the entire text string.

Particular key characters table:

Key	Alphanumeric Editing (For phonebook name editing and renaming handset, including upper & lower case)										Number Editing (For phone number editing, date/time editing)
Key press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	1									1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*	*	?	/	\	(	)					*
#	#	'	,	-	.	&					#

note

- If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step.
- If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

Base Settings

Dial Type (Preset to TONE)

Change the dial mode

1. Press ✆ and ▲/▼ to select BS SETTINGS.
2. Press ✆ and▲/▼ to select DIAL MODE.
3. Press ✆ and▲/▼ to select TONE or PULSE.
4. Press ✆ to confirm.

Change the system PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

1. Press ✆ and ▲/▼ to select BS SETTINGS.
2. Press ✆ and▲/▼ to select CHANGE PIN.
3. Press ✆ and you are requested to enter the 4-digit system PIN.
4. Enter the old system PIN.
5. Press ✆ and enter the new system PIN.
6. Press ✆ and enter the new system PIN again.
7. Press ✆ to confirm.

Paging (Find the Handset)

You can locate the handset by pressing •)) on the base station. All the handsets registered to the base will produce the paging tone and “PAGING…” is displayed on the LCD. You can stop the paging by pressing ✆ on any handset or •)) on the base again.

DELETE HS

1. Press ✆ and ▲/▼ to select BS SETTINGS.
2. Press ✆ and ▲/▼ to select DELETE HS.
3. Press ✆ and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
5. Press ✆ and a list of registered handsets is displayed.
6. Press ▲/▼ to select one of the handsets that you want to de-register.
7. Press ✆ to confirm.

Note: You cannot de-register the handset that you are currently using.

CHANGE FLASH TIME

1. Press ✆ and ▲/▼ to select BS SETTINGS.
2. Press ✆ and ▲/▼ to select FLASH TIME.
3. Press ✆ and ▲/▼ to select your desired flash time (SHORT, MEDIUM, LONG).
4. Press ✆ to confirm.

Handset Settings

Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the ☎ displays on the LCD. When the alarm time is reached, the ☎ and “ALARM ON” flash on the LCD ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold OFF to terminate the snooze function.

note

• If ON is selected, you will be asked to set the alarm time.

Turn on/off the Alarm

1. Press (and ▲/▼ to select HS settings.
2. Press (and ▲/▼ to select Alarm.
3. Press (and▲/▼ to select ON/OFF.
4. Press (to confirm.

Set the Alarm Time

1 Press (and ▲/▼ to select HS SETTINGS
2 Press (and▲/▼ to select ALARM.
3 Press (and▲/▼ to select ON/OFF.
4 Press (to confirm.
5 Enter the alarm time
6 Press (to set the snooze function.
7 Press (and ▲/ ▼ to select SNOOZE ON or SNOOZE OFF.
8. Press (to confirm.

Note:

a. Key press is still applicable if handset keypad is locked and when the alarm time is reached.

b. The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to VOLUME OFF, the alarm still sounds at VOLUME 1 level.

c. During an external call or internal call, if an alarm is set and when the alarm time is reached, the ☎ and “ALARM ON” will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold OFF to disable the alarm, it will revert to the call duration screen.

d. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if snooze function is enabled, the alarm will sound again at the end of the snooze period provided that it’s not ringing or in paging mode at the end of the snooze period.

Ringer Setup

Set the Ringer Melody for Internal Calls

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and ▲/▼ to select RING SETUP.
3. Press ✆ and ▲/▼ to select INT RING.
4. Press ✆ and ▲/▼ to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for internal calls.
5. Press ✆ to confirm.

Set the Ringer Melody for External Calls

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and ▲/▼ to select RING SETUP.
3. Press ✆ and ▲/▼ to select EXT RING.
4. Press ✆ and ▲/▼ to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for external calls.
5. Press ✆ to confirm.

Set the Ringer Volume

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and ▲/▼ to select RING SETUP.
3. Press ✆ and ▲/▼ to select RING VOLUME.
4. Press ✆ and ▲/▼ to select the desired ringer volume (a total of 5 ringer volume levels including VOLUME OFF).
   If VOLUME OFF is selected, <Ringer Off> icon will display.
5. Press ✆ to confirm.

note

- The respective ringer melody will be played while browsing the melody list.
- The respective ringer melody will be played while browsing the melody list.
- The respective ringer volume will be played during your selection.

Tone Setup

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected.

Set Key Tone

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and ▲ ▼ to select TONE SETUP.
3. Press ✆ and ▲/▼ to select KEY TONE
4. Press ✆ and ▲/▼ to turn on or off these tones.
5. Press ✆ to confirm.

Set Battery Tone

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and ▲/▼ to select TONE SETUP.
3. Press ✆ and ▲/▼ to select BATTERY TONE
4. Press ✆ and ▲/▼ to turn on or off these tones.
5. Press ✆ to confirm.

Set Out Of Range Tone

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and ▲/▼ to select TONE SETUP.
3. Press ✆ and ▲/▼ to select OUT OF RANGE
4. Press ✆ and ▲/▼ to turn on or off these tones.
5. Press ✆ to confirm.

Set the Handset Language

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and ▲/▼ to select LANGUAGE.
3. Press and ▲/▼ to select the desired language.
4. Press to confirm.

Rename the Handset

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and ▲/▼ to select RENAME HS.
3. Press and enter the name of your handset.
4. Press to confirm.

Set Handset Display

You can choose to display time or handset name in your idle screen.

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and ▲/▼ to select HS DISPLAY.
3. Press and ▲/▼ to select HANDSET NAME or TIME.
4. Press to confirm.

Set the Auto Answer

If you turn on the Auto Answer, you can pick up the call from the cradle without pressing any key.

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and ▲/▼ to select AUTO ANSWER.
3. Press and ▲/▼ to turn on or off the auto answer feature.
4. Press to confirm.

note

- If time has been set before, the current time will display, otherwise, “HH:MM” will display.

Date and Time Settings

You will need to set the correct time and date so that you know when you received answering machine (applicable to model with answering machine) or call list entries.

Change the Date Format

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and▲/▼ to select DATE & TIME.
3. Press and▲/▼ to select DATE FORMAT.
4. Press and▲/▼ to select your desired date format (DD-MM-YY or MM-DD-YY).
5. Press to confirm.

Change the Time Format

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and▲/▼ to select DATE & TIME.
3. Press and▲/▼ to select TIME FORMAT.
4. Press and ▲/▼ to select your desired time format (12 HR or 24 HR).
5. Press to confirm.

Set the Time

1. Press and ▲/▼ to select HS SETTINGS.
2. Press and▲/▼ to select DATE & TIME.
3. Press and▲/▼ to select SET TIME.
4. Press to enter the time information. The time entered will be in the format follow the TIME FORMAT you set before.
5. Press to confirm.

Set the Date

1. Press ✆ and ▲/▼ to select HS SETTINGS.
2. Press ✆ and▲/▼ to select DATE & TIME.
3. Press ✆ and▲/▼ to select SET DATE.
4. Press ✆ to enter the date information. The time entered will be in the format follow the DELETE FORMAT you set before.
5. Press ✆ to confirm.

Reset your Phone

You can reset your phone to the default settings. After reset, all you personal settings and call list entries will be deleted, but your phonebook remains unchanged.

1. Press ✆ and ▲/▼ to select DEFAULT.
2. Press ✆ and you are requested to enter the 4-digit system PIN.
3. Enter the 4-digit system PIN.
4. Press ✆ to confirm.
5. Press ✆ to re-confirm.

Registration

Your handset and base station is pre-registered. Up to six handsets can be registered to a single base station. If for some reason, the handset is not registered to the base station (flashes even when the handset is near the base station), register your handset according to the following procedure.

1. Press and hold •)) on the base station for about five seconds, the base station is entered into registration mode.
2. Press ✆ and ▲/▼ to select REGISTRATION.
3. Press ✆ and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
5. Press ✆ to confirm.

If the handset registration is successful, you will hear a confirmation tone and the will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the will still flash.

note

- If date has been set before, the current date will display, otherwise, “DD-MM-YY” will display.

Default Settings

HS Settings			
Handset name	Handset	**EXT Ring Type**	Melody 1
Language	English	**Alarm Melody**	melody 4
INT Ring Vol. Set	Vol 3	**Data Format**	DD-MM-YYYY
EXT Ring Vol. Set	Vol 3	**Time Format**	24 HR
Earpiece Vol. Set	Vol 3	**Set Date**	01/01/2009
Handsfree Vol. Set	Vol 3	**HS ECO Mode feature**	On
Low Battery Beep	On	**Phone Book Capacity**	20
Out of Range Beep	Off	**Redial Capacity**	5
Key Tone	On	**CID Capacity**	10
Confirmation Tone	On	**BS Settings**	
Key Locked	Off	**Default Flash Time**	Medium
Alarm ON	Off	**Dial mode**	Tone
Auto Answer On	On	**PIN for handset/base**	0
INT Ring Type	Melody 2	**BS ECO Mode feature**	On

Troubleshooting

If you have difficulty with your phone, please try the suggestions listed below:

Problem	Cause	Solutions
No dialing tone when pressing key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. The line is busy, as another handset is used. d. Wrong connection cord E	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station plug and the 220V plug (remove and plug-in). c. Wait until the line is unoccupied. d. Use the original connection cord.
When connect to a PBX, no and/or wrong connection after dialing.	Dialing prefix is needed.	Insert the dialing prefix
“SEARCHING” is displayed.	a. Base station out of range. b. Base station not connected to mains.	Reduce the range. Connect base station to mains.
The call does not work.	Service not activated or wrong operator or wrong setting	Check your Subscription with network or change the dial mode.
No display.	Empty battery	Recharge battery

Please contact the technical support of the network provider for further information.
This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

For technical support, please call VTech Technical Inquiry Hotline Tel: 852-2667 7433

Technical specifications

Standard: DECT

Number of channels: 10

Frequency: 1.88GHz to 1.9GHz

Operating range:
up to 300 meters outdoors,
up to 50 meters indoors

Operating time:
standby: 100 hrs approx.
talking: 10 hrs approx

Battery charging time: approx. 16 hours

Base station dimensions:
width / depth / height = 87.5 x 87.5 x 102.5 mm

Handset dimensions
width / depth / height = 46.6 x 29 x 156 mm

Charger dimensions
width / depth / height = 72.9 x 66 x 72 mm

Weight of a base: 115.1g (without adaptor)

Weight of a handset: 119.1g (with battery)

Weight of a charger: 47.5g (without adaptor)

Power Adaptor Information

	Base Adaptor
Rating	Input: 110-240V 50/60Hz Output: 6V 300mA

	Charger Adaptor (For VT1050T only)
Rating	Input: 110-240V 50/60Hz Output: 6V 300mA

Notes:

- Use only with provided adaptor

Battery Information

Battery Type	NiMH (Rechargeable battery)
Rating	500mAh 1.2V

Notes:

- Use only with provided batteries

VTech Electronics (HK) Ltd.
21/F, C.N.T. House, No. 120 Johnston Road,Wan Chai, Hong Kong.
Customer Service Center Tel: 852-2776 3223
Technical Inquiry Hotline Tel: 852-2667 7433

91-002892-010-100

vtech